



ZK-2WD

Step1:先把小车底板、紧固件、码盘的黄色保护纸撕掉,然后把紧固件插入小车底板

Setp1:Insert the fastener into the chassis after tearing off the yellow protection wrap of the chassis,the fastener and the code wheel.







Setp2:Install the code wheel and fix the motor to the chassis.(Attention,the copper sheet of the leading wire of the motor should face inside,the same side of the encoder)



Step3:插入螺丝.把电机固定到小车底板,并拧上螺帽 Setp3:Fix the motor to the chassis,then insert and tighten the screws.

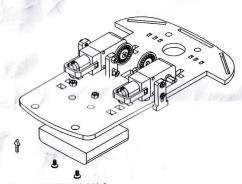

Step4:插入螺丝,固定电池盒 Setp4:Insert the screws and fix the battery container

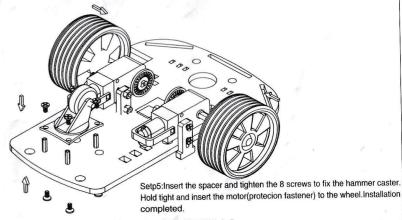

Step5:放入铜柱,拧进8个螺丝固定万向轮,手捏住电机(保护紧固件),并往里面插入轮子,组装完成